

## Specification & Installation Guide

#### **Features**

- Free standing 60" Double Bowl vanity: 33-1/2" (852mm) H x 18"(458mm)D x 59-1/4" (1505mm)W
- Furniture grade plywood layered with solid wood veneer and protected with several coats of polyurethane (No particle board or MDF used).
- Matching finish inside out
- Four fully adjustable drawers with full-extension soft-close European hardware.
- Drawers includes adjustable tempered glass dividers and retainers.
- Handle option: Polished chrome or brushed nickel.
- Feet option: 4 L-feet or 2 S-feet in polished chrome or brushed nickel.

#### Top/Basin options


- Quartzstone<sup>™</sup> top & white under mount ceramic basin
- Glossy White X-Stone top/basin
- Glossy or Matte White X-Stone flat countertop


#### **Package Dimensions**


63" x 22"x 28"

#### Weight

208 lbs. / 96 kgs

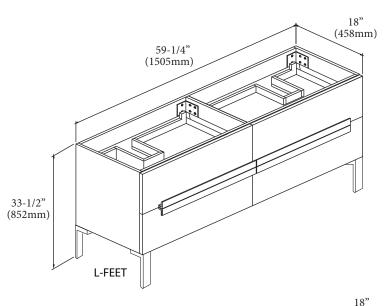

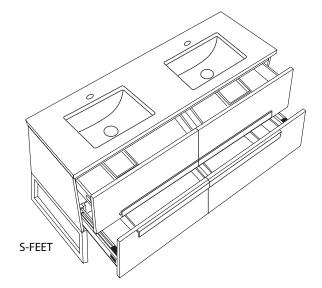

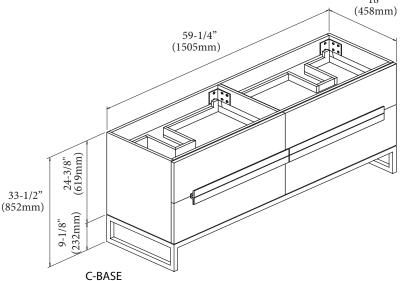




01 | Page

For clarification, please contact Madeli Customer Care at (800)-819-6988 or (305)-718-8817 Ext. 1 All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.



## Specification & Installation Guide

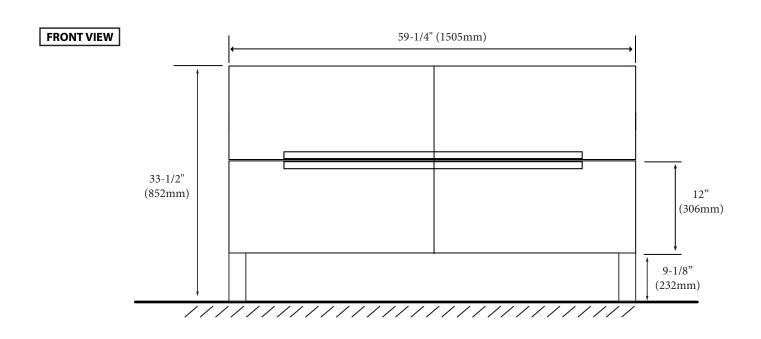


#### **TOP VIEW** 11-7/8" 11-7/8" (300mm) (300mm) 59-1/4"(1505mm) 9-7/8" 9-7/8" 4" (100mm) 4" (100mm) (250mm) (250mm) 10-5/8" (270mm) 15-3/8" (392mm) 18" (458mm) 3/4" (19mm) 1/8" (5mm) 23-11/16" (601mm) 23-11/16" (601mm)


02 | Page

For clarification, please contact Madeli Customer Care at (800)-819-6988 or (305)-718-8817 Ext. 1 All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.



## Specification & Installation Guide

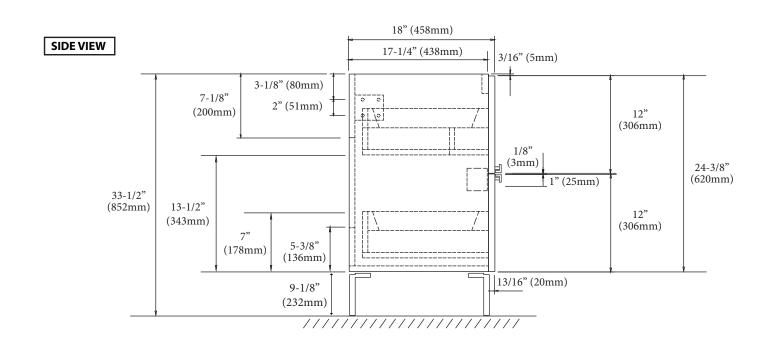

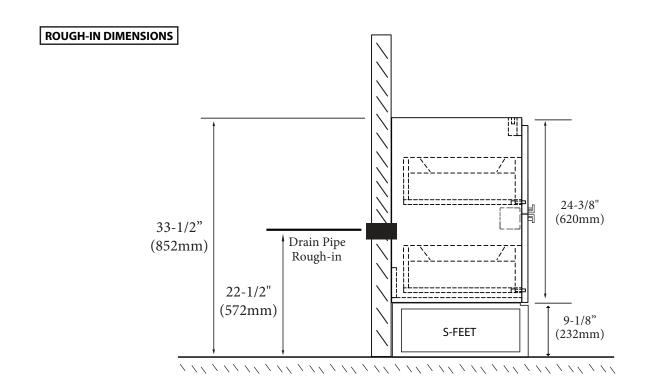

03 | Page


For clarification, please contact Madeli Customer Care at (800)-819-6988 or (305)-718-8817 Ext. 1 All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.



# Specification & Installation Guide

### **INSTALLATION INSTRUCTIONS**

- 1. Install legs
  - 1. Place feet in indicated positions.
  - 2. Mark screw locations.
  - 3. Pre-drill holes with 5/64, 3/32 or 7/64 drill bit about 1/2" deep.
  - 4. DO NOT OVER TIGHEN THE SCREWS. DOING SO WILL SPLIT THE WOOD SIDE PANEL.
  - 5. If using a regular battery drill, set clutch to minimum and increase setting as needed.
  - 6. DO NOT USE AN IMPACT DRILL. IT WILL SPLIT THE WOOD SIDE PANEL.

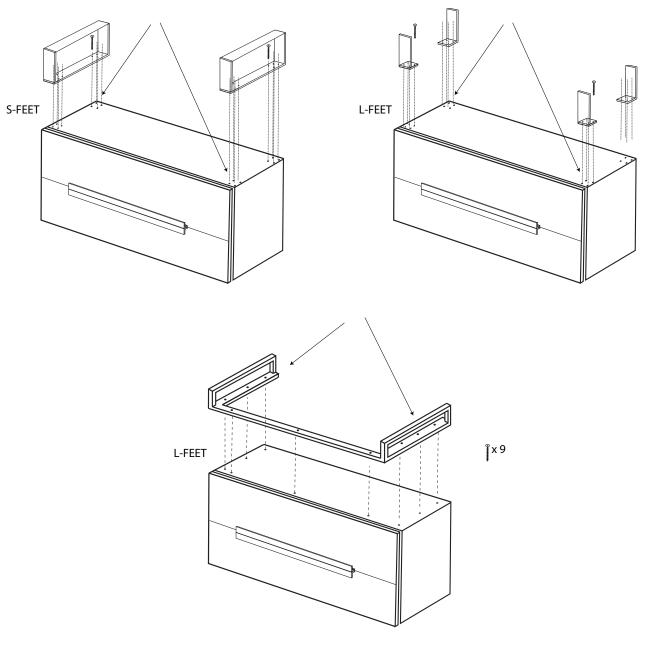

For clarification, please contact Madeli Customer Care at (800)-819-6988 or (305)-718-8817 Ext. 1

All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.


04 | Page



## Specification & Installation Guide

### CABINET PLACEMENT & INSTALLATION - SECURE CABINET TO WALL

- 1) Level cabinet in position
- 2) Secure cabinet with screws in drywall studs
- 3) Install countertop with silicone

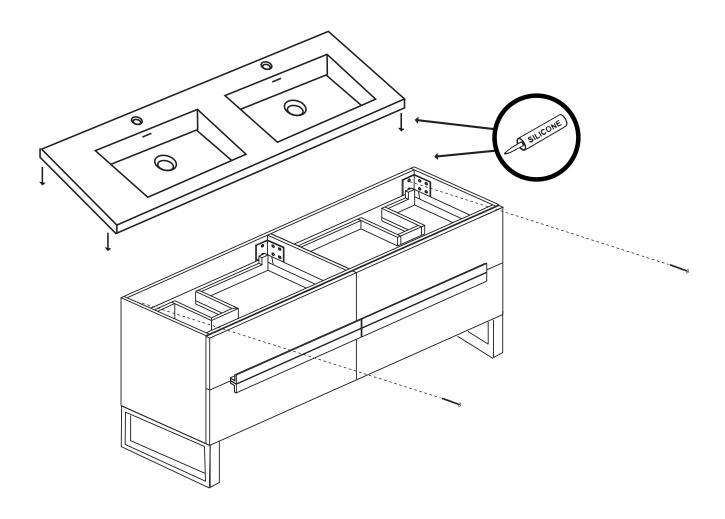

For clarification, please contact Madeli Customer Care at (800)-819-6988 or (305)-718-8817 Ext. 1 All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.

05 | Page