

Specification & Installation Guide

Features

- Free standing 48" vanity: 33"(838mm)H x 22"(560mm)D x 47-5/8" (1210mm)W
- Furniture grade plywood layered with solid wood veneer and protected with several coats of polyurethane (No particle board or MDF used)
- · Matching finish inside out
- Two fully adjustable drawers with full-extension soft-close European hardware
- Drawers include adjustable tempered glass dividers and retainers
- Feet option: 4 L-feet or 2 S-feet in polished chrome or brushed nickel.

Top/Basin options


- Glossy White X-Stone top/basin
- Glossy or Matte White X-Stone flat countertop


Package Dimensions


52" x 26" x 30"

Weight

217 lbs. / 99 kgs

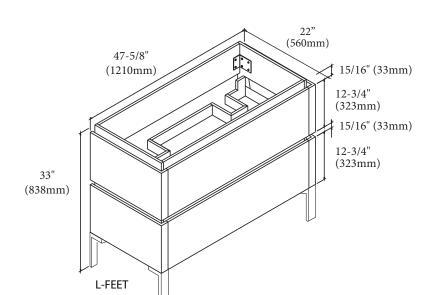

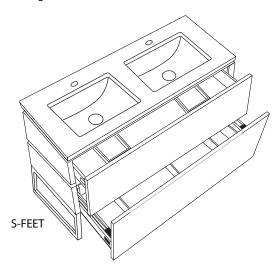

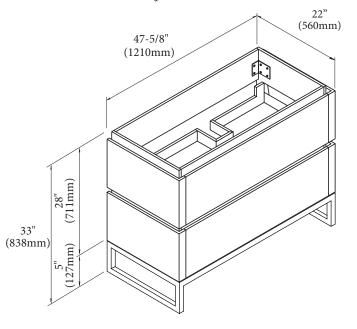




01 | Page

For clarification, please contact Madeli Customer Care at (800)-819-6988 or (305)-718-8817 Ext. 1

All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.



Specification & Installation Guide

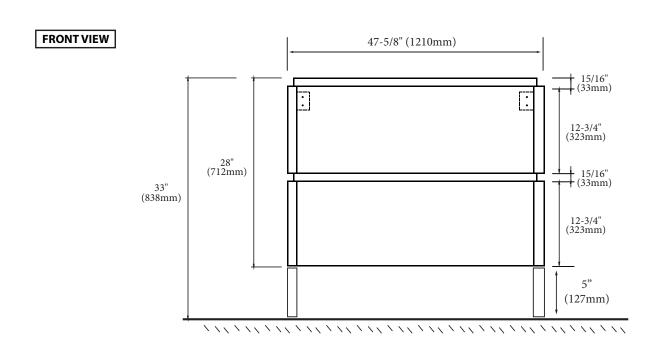

TOP VIEW 47-5/8" (1210mm) 9-7/8" (250mm) 4" (100mm) 22" 12-9/16" (560mm) (320mm) 18" 17-3/8" (458mm) (442mm) 2" (50mm) 2" (50mm) 1/8" (3mm) 1/8" (3mm) 43-3/8" (1104mm)


02 | Page

For clarification, please contact Madeli Customer Care at (800)-819-6988 or (305)-718-8817 Ext. 1 All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.


All Rights Reserved - 2016



Specification & Installation Guide

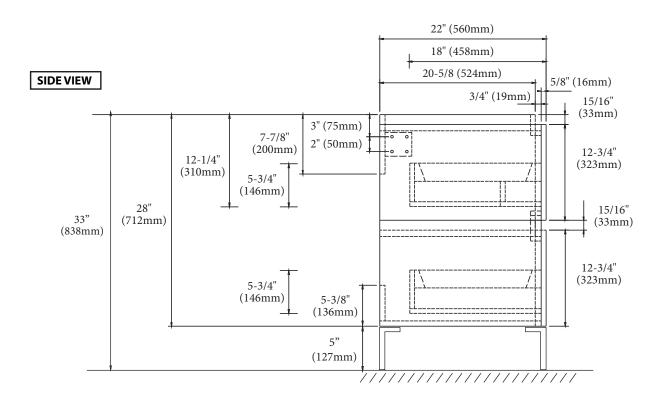


ROUGH-IN DIMENSIONS

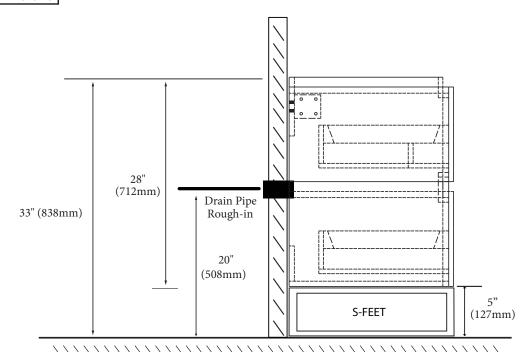

03 | Page

For clarification, please contact Madeli Customer Care at (800)-819-6988 or (305)-718-8817 Ext. 1 All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.






Specification & Installation Guide

INSTALLATION INSTRUCTIONS

- Install feet
 - 1. Place feet in indicated positions.
 - 2. Mark screw locations.
 - 3. Pre-drill holes with 5/64, 3/32 or 7/64 drill bit about 1/2" deep.
 - 4. DO NOT OVER TIGHEN THE SCREWS. DOING SO WILL SPLIT THE WOOD SIDE PANEL.
 - 5. If using a regular battery drill, set clutch to minimum and increase setting as needed.
 - 6. DO NOT USE AN IMPACT DRILL. IT WILL SPLIT THE WOOD SIDE PANEL.

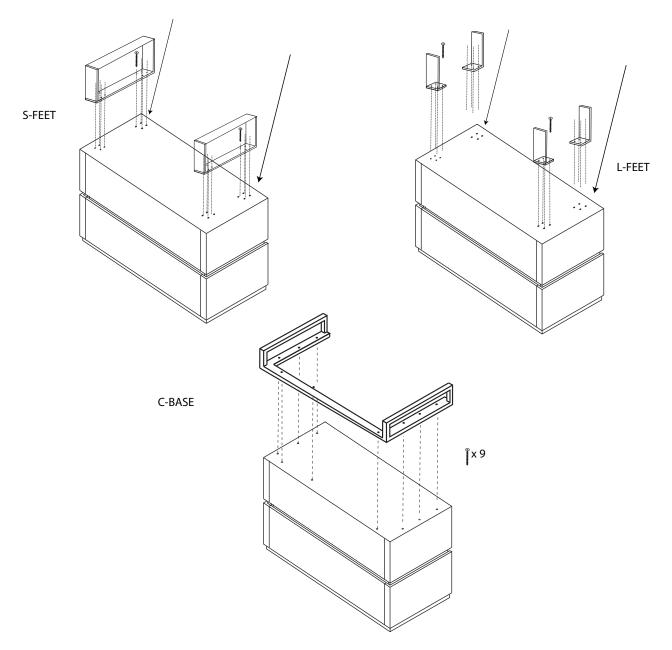

For clarification, please contact Madeli Customer Care at (800)-819-6988 or (305)-718-8817 Ext. 1

All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.

Rev. 01/01/2021


04 | Page



Specification & Installation Guide

CABINET PLACEMENT & INSTALLATION - SECURE CABINET TO WALL

- 1) Level cabinet in position
- 2) Secure cabinet with screws in drywall studs
- 3) Install countertop with silicone

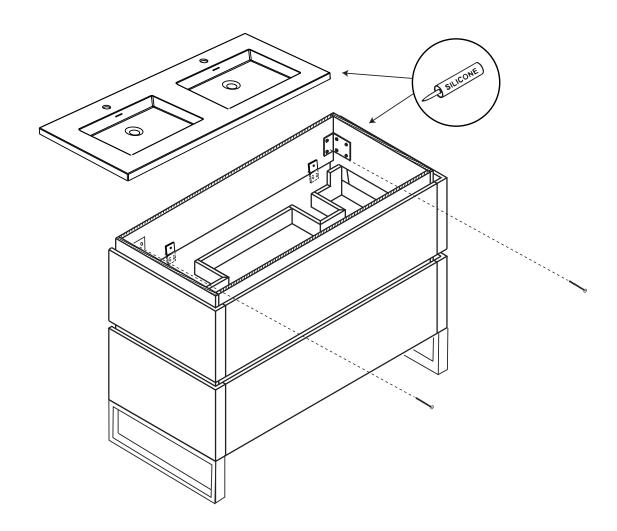

For clarification, please contact Madeli Customer Care at (800)-819-6988 or (305)-718-8817 Ext. 1

All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.

05 | Page