

Specification & Installation Guide

Features

- Free Standing 24" vanity: 33-1/2"(852mm)Hx 18"(458mm)Dx 23-5/8" (600mm)W
- Furniture grade plywood layered with solid wood veneer and protected with several coats of polyurethane.
- Matching finish inside out
- Two fully adjustable drawers with full-extension soft-close hardware.
- Bottom drawer includes adjustable tempered glass dividers and retainers
- Feet option: 4 L-Feet, 2 S-Feet or C-Base in Polished Chrome, Brushed Nickel, Polished Nickel, Matte Black, or Satin Brass

Top/Basin options


- Quartzstone™ top & white under mount ceramic basin 1-1/2"H
- Glossy White X-Stone top/basin
- Glossy White TroughSink 4-1/2"H
- Ceramic basin
- Tempered glass top/basin
- Glossy or Matte White X-Stone flat top


Package Dimensions

Cabinet: 32" x 21"x 28"

Weight

125 lbs. / 57 kgs

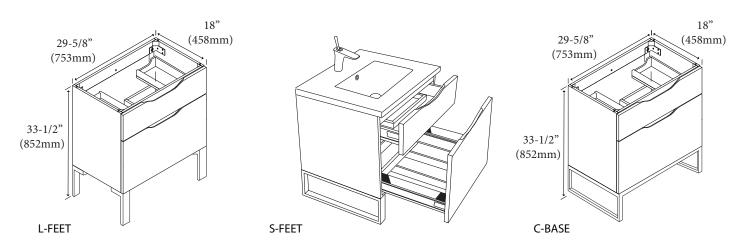

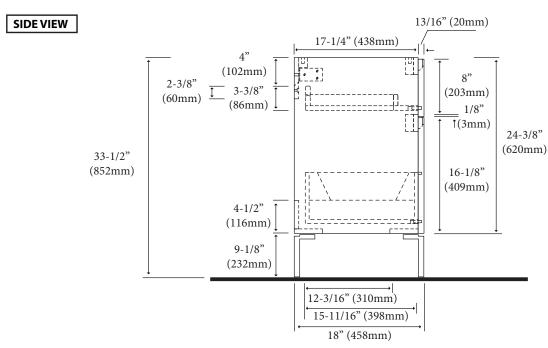

01 | Page


For clarification, please contact Madeli Customer Care at (800)819-6988 or (305)718-8817 Ext. 1 or service@madeli.com All dimentions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.

All Rights Reserved - 2016




Specification & Installation Guide

TOP VIEW

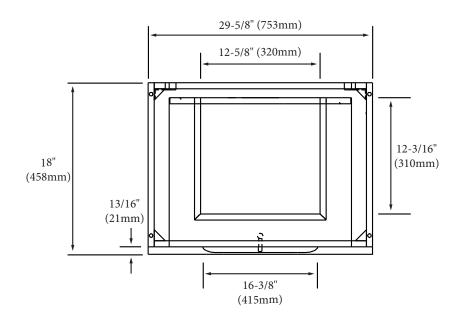

BACK VIEW

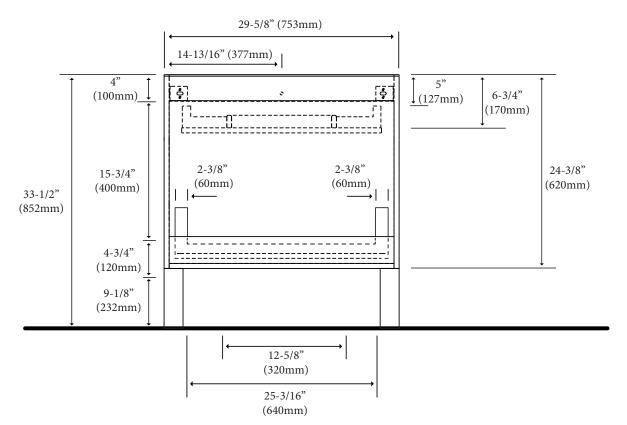


02 | Page

For clarification, please contact Madeli Customer Care at (800)819-6988 or (305)718-8817 Ext. 1 or service@madeli.com All dimentions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.




Specification & Installation Guide

FRONT VIEW

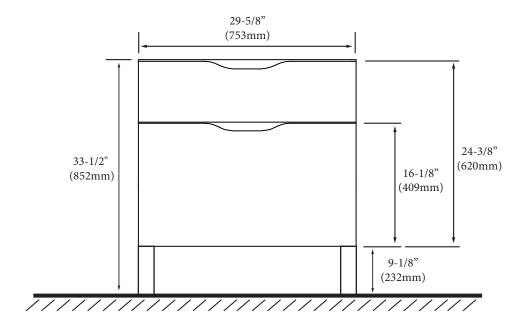


ROUGH-IN DIMENSIONS

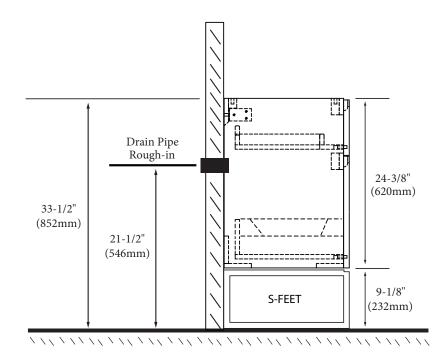

03 | Page

For clarification, please contact Madeli Customer Care at (800)819-6988 or (305)718-8817 Ext. 1 or service@madeli.com All dimentions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.






Specification & Installation Guide

C-Base installation


INSTALLATION INSTRUCTIONS


- Install feet
 - 1. Remove drawers and place vanity upside down
 - 2. Place feet in indicated positions
 - 3. Mark screw locations
 - 4. Pre-drill holes with 5/64, 3/32 or 7/64 drill bit about 1/2" deep
 - 5. DO NOT OVER TIGHTEN THE SCREWS. DOING SO WILL SPLIT THE WOOD SIDE PANEL
 - 6. If using a regular battery drill, set clutch to minimum and increase setting as needed
 - 7. DO NOT USE AN IMPACT DRILL. IT WILL SPLIT THE WOOD SIDE PANEL

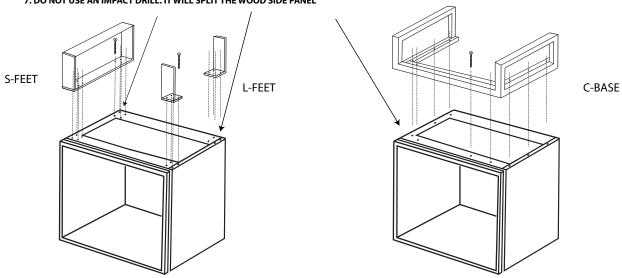









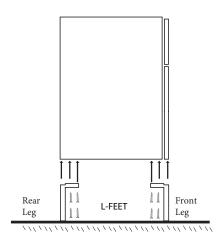

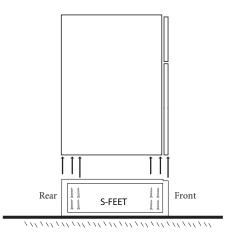

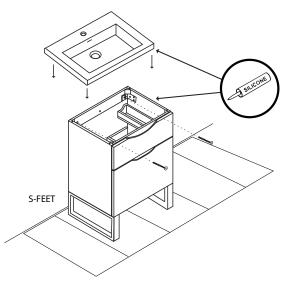

For clarification, please contact Madeli Customer Care at (800)819-6988 or (305)718-8817 Ext. 1 or service@madeli.com All dimentions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.

04 | Page