

Specification & Installation Guide

Features

- Free Standing 42" vanity: 33-1/2"(852mm)Hx 18"(458mm)Dx 41-5/8" (1058mm)W
- •Furniture grade plywood layered with solid wood veneer and protected with several coats of polyurethane.
- Matching finish inside out
- Two fully adjustable drawers with full-extension soft-close European hardware.
- •Bottom drawer includes adjustable tempered glass dividers and retainers
- Feet option: 4 L-Feet, 2 S-Feet or C-Base in Polished Chrome, Brushed Nickel, Polished Nickel, Matte Black or Satin Brass finish

Top/Basin options


- Quartzstone[™] top & white under mount ceramic basin
- Glossy White X-Stone top/basin 1-1/2"H
- Glossy White Trough Sink 4-1/2"H
- Glossy or Matte White X-Stone flat top

Package Dimensions


Cabinet: 43" x 21"x 28"

Weight

158 lbs. / 72 kgs

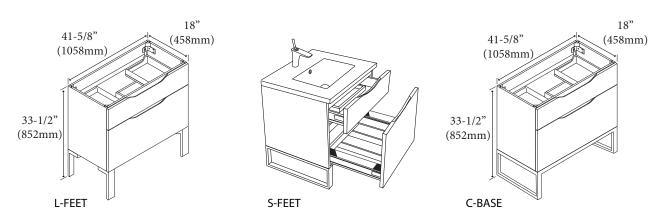

SIDE VIEW

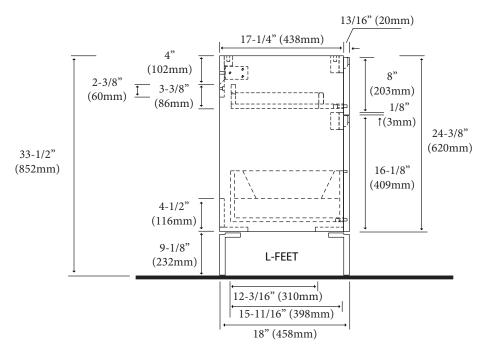


01 | Page

For clarification, please contact Madeli Customer Care at (800)819-6988 or (305)718-8817 Ext. 1 or service@madeli.com All dimentions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.




Specification & Installation Guide

TOP VIEW

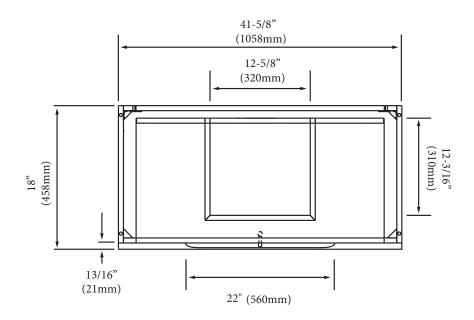

BACK VIEW

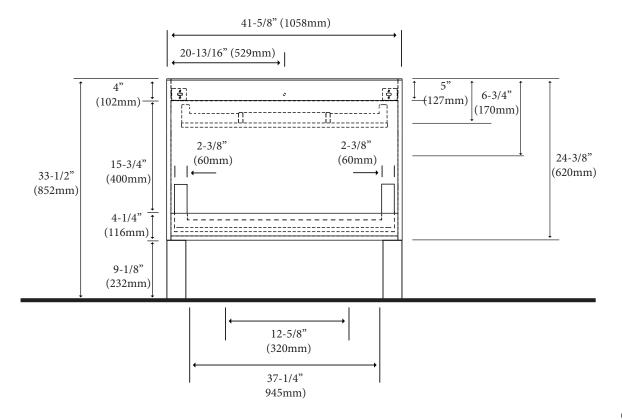


02 | Page

For clarification, please contact Madeli Customer Care at (800)819-6988 or (305)718-8817 Ext. 1 or service@madeli.com
All dimentions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.




Specification & Installation Guide

FRONT VIEW

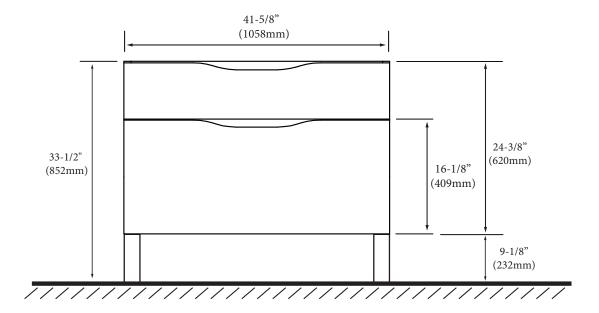

ROUGH-IN DIMENSIONS

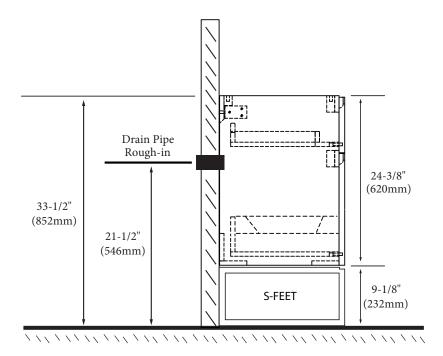

03 | Page

Rev. 02/01/21




Specification & Installation Guide


C-Base installation

INSTALLATION INSTRUCTIONS


- 1. Install feet
 - 1. Remove drawers and place vanity upside down
 - 2. Place feet in indicated positions
 - 3. Mark screw locations
 - 4. Pre-drill holes with 5/64, 3/32 or 7/64 drill bit about 1/2" deep
 - 5. DO NOT OVER TIGHTEN THE SCREWS. DOING SO WILL SPLIT THE WOOD SIDE PANEL
 - 6. If using a regular battery drill, set clutch to minimum and increase setting as needed
 - 7. DO NOT USE AN IMPACT DRILL. IT WILL SPLIT THE WOOD SIDE PANEL

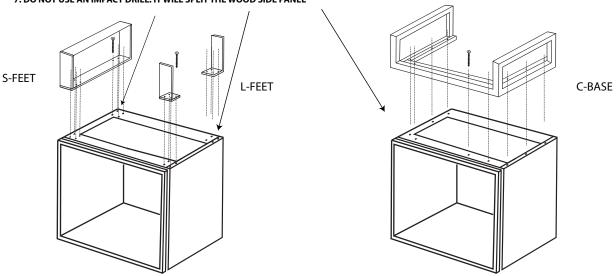




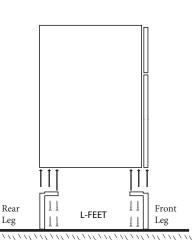

S- Feet position

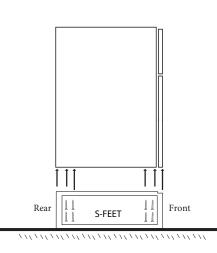

Secure cabinet to wall and Install countertop with Silicone

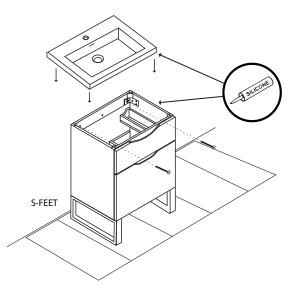

For clarification, please contact Madeli Customer Care at (800)819-6988 or (305)718-8817 Ext. 1 or service@madeli.com All dimentions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.

04 | Page