

Specification & Installation Guide


Features

- Free Standing 48C vanity: 33-1/2" (851mm)H x 22" (560mm)D x 47-5/8" (1210mm)W
- Furniture grade plywood layered with solid wood veneer and protected with several coats of polyurethane.
- · Matching finish inside out.
- Three drawers with full-extension soft-close hardware.
- All drawers with adjustable glass dividers.
- Feet options: 4 L-feet, 2 S-feet or 1 C-base.
- Handle/Inlay finish options: polished chrome (PC), brushed nickel (BN), polished nickel (PN), matte black (MB) and satin brass (SB)

Top/Basin options

- Glass countertop with above-counter ceramic basin.
- Glossy White X-Stone 2"H top/basin
- Glossy White X-Stone 4-1/2" H Trough sink
- X-Stone 3/4"H countertop no holes. To be field drilled.
- X-Stone 3/4"H countertop with above-counter ceramic basin
- Quartzstone 3"H countertop with undermount ceramic basin

NOTE: All 3/4" countertops with undermount sinks including Madeli's Quartzstone QST2208 collection and CB-2015 cannot be used on the Villa-B850 & Estate-B860 vanities.

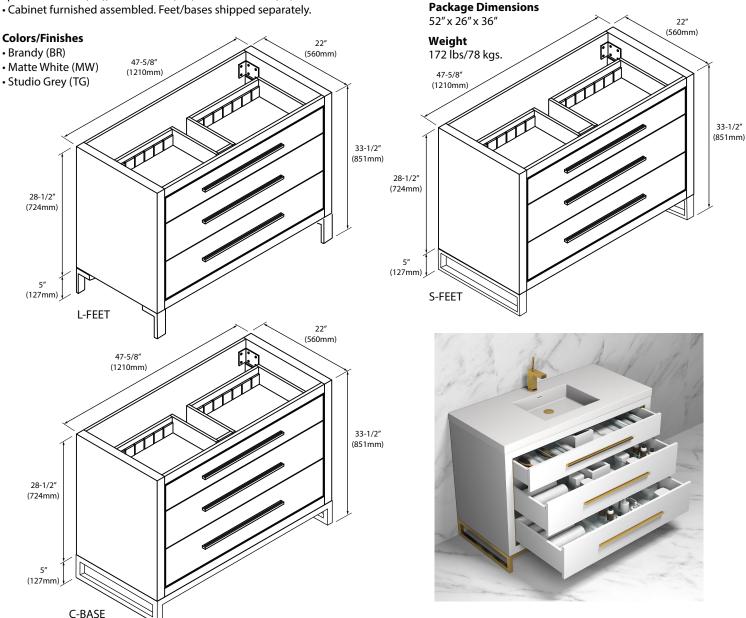


For clarification, please contact Madeli Customer Care at (800)-819-6988 or (305)-718-8817 Ext. 1 or service@madeli.com All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.


> Rev. 060122 All Rights Reserved - 2022



Specification & Installation Guide

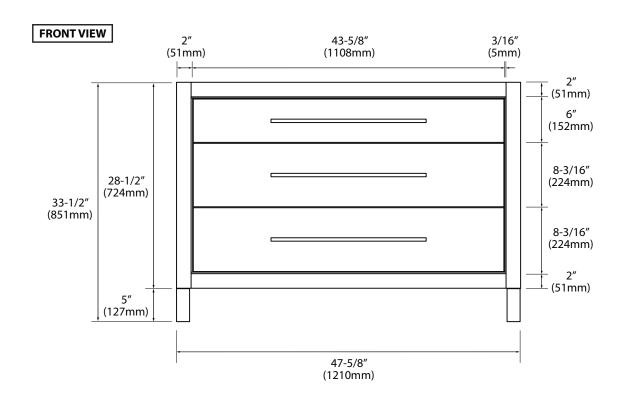

TOP VIEW

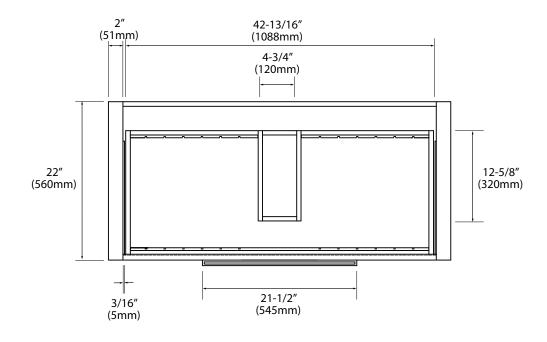


02 | Page


For clarification, please contact Madeli Customer Care at (800)-819-6988 or (305)-718-8817 Ext. 1 or service@madeli.com All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.



Specification & Installation Guide

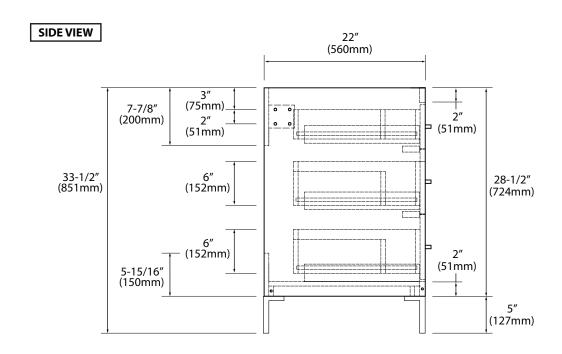

ROUGH-IN DIMENSIONS

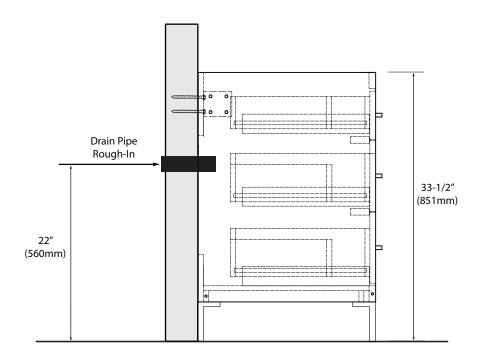

03 | Page

For clarification, please contact Madeli Customer Care at (800)-819-6988 or (305)-718-8817 Ext. 1 or service@madeli.com All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.




Specification & Installation Guide

INSTALLATION INSTRUCTIONS


1. Feet/Base Installation


- 1. Remove drawers and place vanity upside down
- 2. Place feet in indicated positions
- 3. Mark screw locations
- 4. Pre-drill holes with 5/64, 3/32 or 7/64 drill bit about 1 1/2" deep
- 5. DO NOT OVER TIGHTEN THE SCREWS. DOING SO WILL SPLIT THE WOOD SIDE PANEL
- 6. If using a regular battery drill, set clutch to minimum and increase setting as needed
- 7. DO NOT USE AN IMPACT DRILL. IT WILL SPLIT THE WOOD SIDE PANEL

S-FEET L-FEET

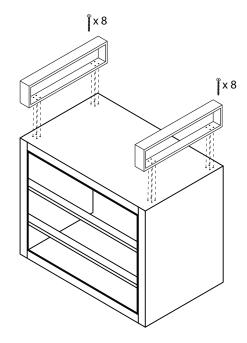



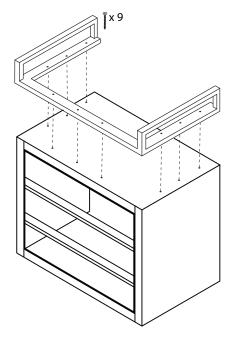

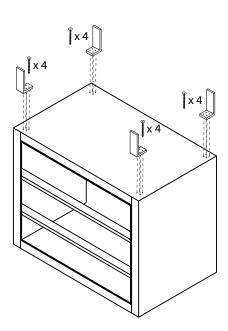

04 | Page


For clarification, please contact Madeli Customer Care at (800)-819-6988 or (305)-718-8817 Ext. 1 or service@madeli.com All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.



Specification & Installation Guide

CABINET PLACEMENT & INSTALLATION - SECURE CABINET TO WALL

- 1) Level cabinet in position
- 2) Secure cabinet with screws in drywall studs
- 3) Install countertop with silicone

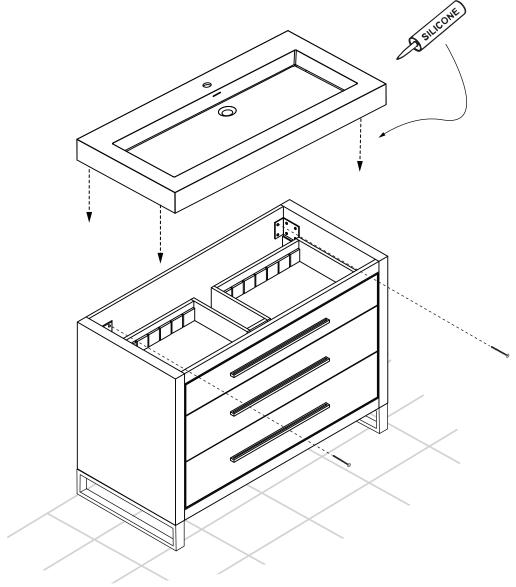

05 | Page