

Specifications and Installation Guide

**LCRE-Renaissance
 LCREX-Renaissance SE**
Wall Hung Linen Cabinets

Models

LCRE-201871-L002/R002
 LCREX-201871-L002/R002

**LCVN-Vision
 LCVNX-Vision SE**
Free Standing Linen Cabinets

Models

LCVN-201871-L001/R001
 LCVNX-201871-L001/R001

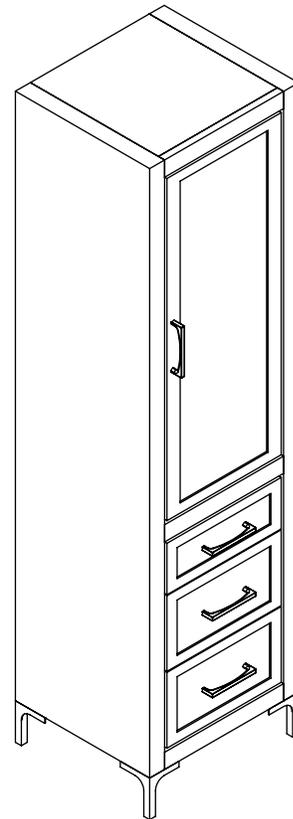
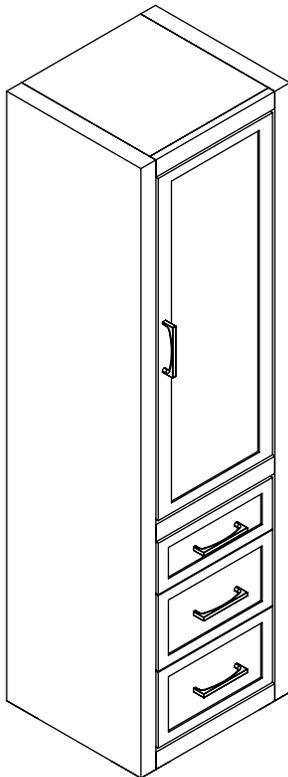


Table of Contents

Page / Page

Specifications: LCRE/LCREX/LCVN/LCVNX.....2

Typical Installation: **Wall Hung**/LCRE-Renaissance/LCREX-Renaissance SE.....3

Feet/Base Installation: **Free Standing**/LCVN-Vision/LCVNX-Vision SE.....4

Typical Installation: **Free Standing**/LCVN-Vision/LCVNX-Vision SE.....5

For clarification, please contact Madeli Customer Care at (800) 819-6988 Ext.1 or service@madeli.com
 Pour plus de précisions, veuillez contacter le service client Madeli au (800) 819-6988 Ext.1 ou service@madeli.com

LCRE/LCREX/LCVN/LCVNX-201871

Cabinet Specifications

Features:





- Wall hung Linen Cabinet features one soft-closing door, three bottom drawers and one interior drawer with full extension soft closing guides.
- Full 18" depth for ample and functional storage space.
- 4 Handle Options: NP = No Handles, HR=Mid-Century handle, HY=Trendsitional™ handle, and HP=Contempo handle with backplate
- Top cabinet with 2 matching color wooden adjustable shelves for space allocation customization.
- Top cabinet includes a pull-out interior drawer with full extension soft closing glides
- Allows easy storage of folded towels.
- LCRE-Renaissance and LCVN-Vision include perimeter accent inlay
- Available left or right hinged
- Available finishes: Brandy (BR), Sapphire (SA), Studio Grey (TG), White (WH), Coastal Grey (CG), Natural Oak (NO), Natural Walnut (NW)
- Handles/Inlay: Available in Polished Chrome, Brushed Nickel, Matte Black, Satin Brass and Polished Nickel

Package dimension

23" x 21" x 73"

Gross weight

154 lbs / 70 kgs

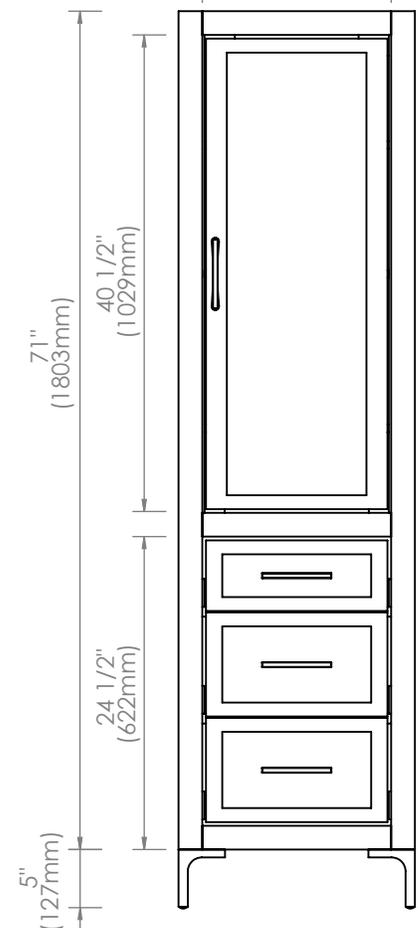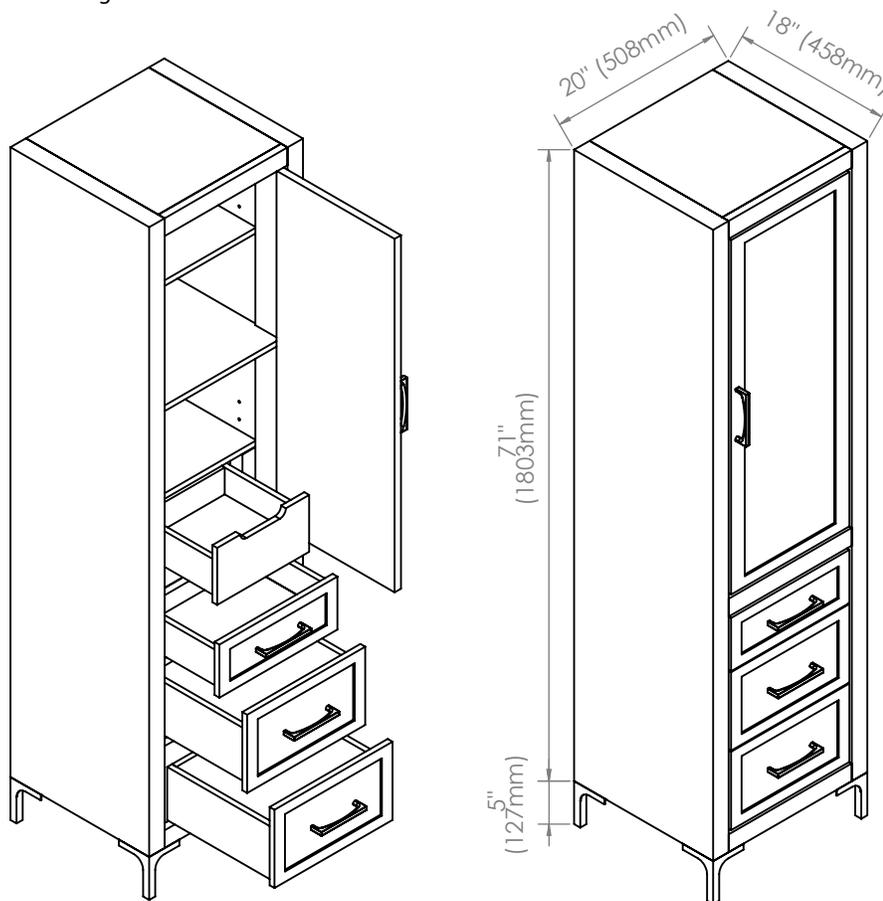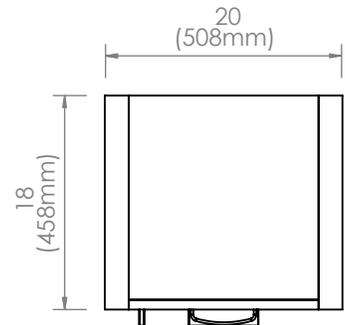

Right-hinged Shown



For clarification, please contact Madeli Customer Care at (800) 819-6988 Ext.1 or service@madeli.com
 Pour plus de précisions, veuillez contacter le service client Madeli au (800) 819-6988 Ext.1 ou service@madeli.com

Renaissance/Renaissance SE - WALL HUNG CABINET

Installation Guide

TYPICAL INSTALLATION

- 1) Level the linen cabinet at the same off-the-floor height as the matching vanity.
- 2) Secure the linen cabinet to wood backing and to wall.

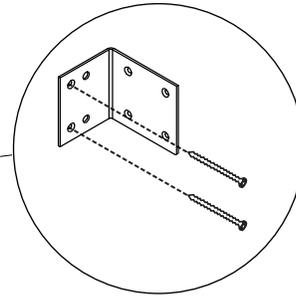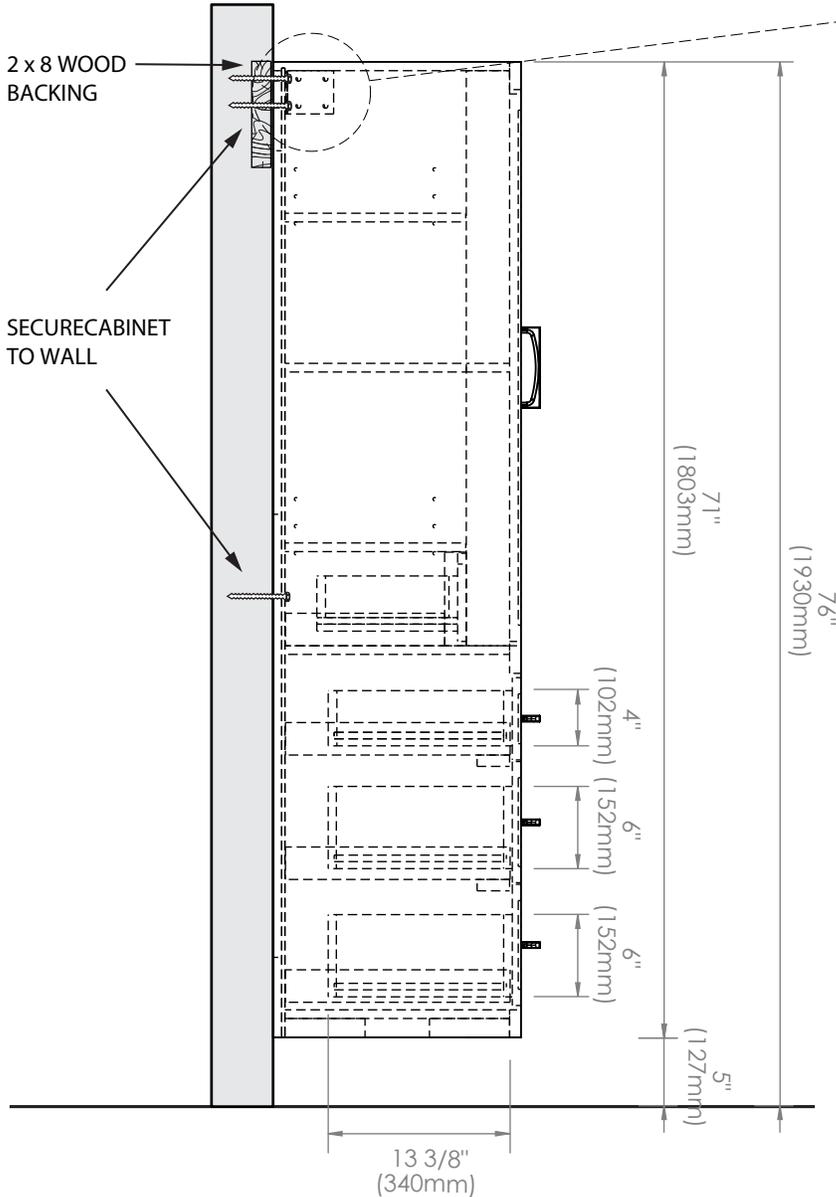


ACCESSORIES FOR INSTALLATION



Anchors
x6




Lag Bolts
5/16 x 1 1/2"
x6



Shelf Support Pegs
For 6mm Dia. Hole
x8

WALL PREPARATION

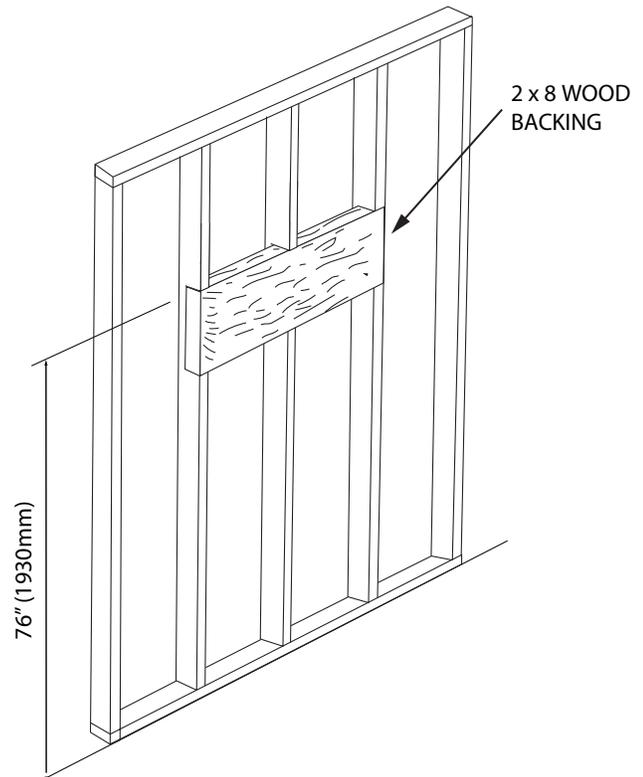


Aesthetically, 5" (127mm) off the floor is suggested as a preferred height, which will result in a linen cabinet total height of 76" (1930mm). If a different height is desired for the vanity and linen cabinet, adjust the height of the respective wood backing accordingly.

For clarification, please contact Madeli Customer Care at (800) 819-6988 Ext.1 or service@madeli.com
 Pour plus de précisions, veuillez contacter le service client Madeli au (800) 819-6988 Ext.1 ou service@madeli.com


Vision/Vision SE - FREE STANDING CABINET

Feet/Base Installation


Y-FEET

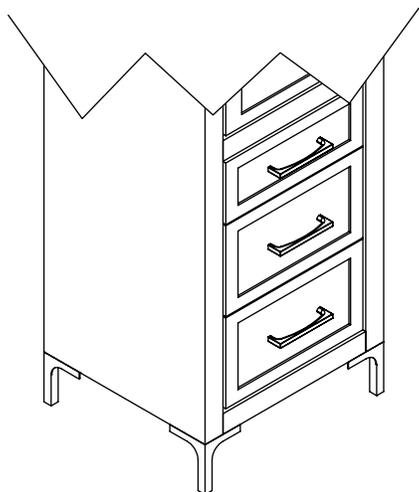

R-FEET

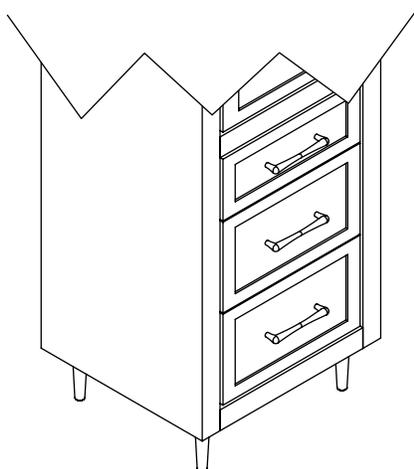

C-BASE

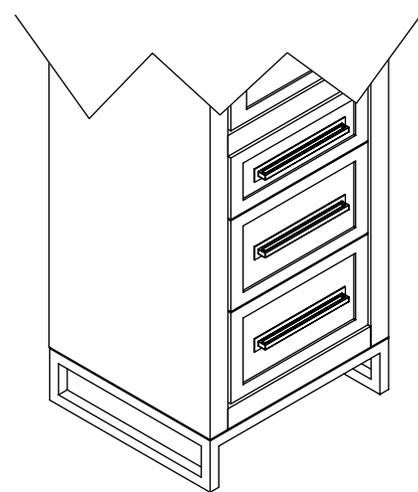


FEET/BASE INSTALLATION

1. Flip cabinet in the upside down position.
2. Mark screw locations using legs/base as template.
3. Pre-drill holes with 5/64", 3/32" or 7/64" drill bit about 1/2" deep.
4. Using provided screws, fix legs/base to cabinet as shown below.

If using a regular battery drill, set clutch to minimum and increase setting as needed.


DO NOT OVER TIGHTEN THE SCREWS. DOING SO WILL SPLIT THE WOOD SIDE PANEL.

Y-FEET INSTALLATION

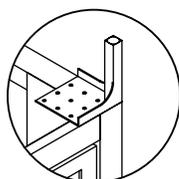


Flush with cabinet edges

R-FEET INSTALLATION



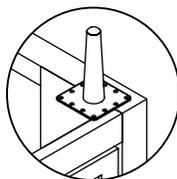


Recessed from cabinet edges

C-BASE INSTALLATION

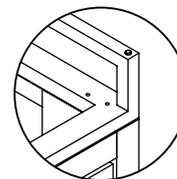

Flush with cabinet edges

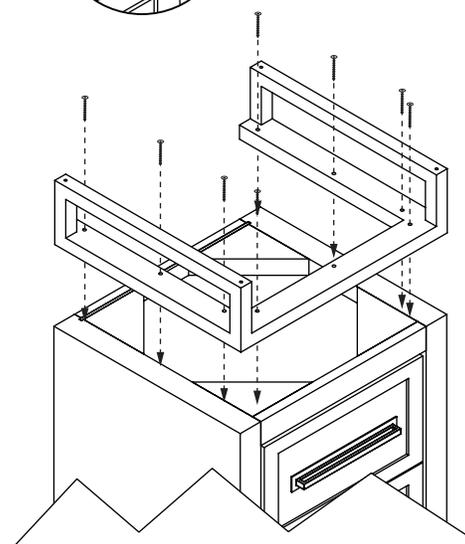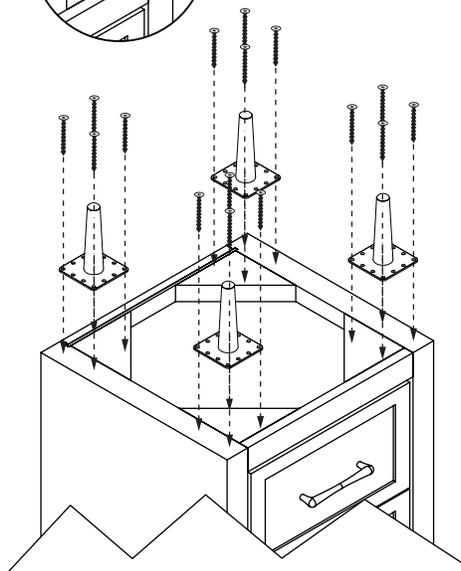
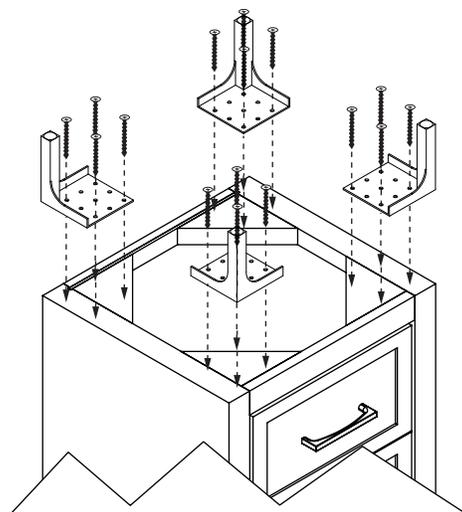


For clarification, please contact Madeli Customer Care at (800) 819-6988 Ext.1 or service@madeli.com
Pour plus de précisions, veuillez contacter le service client Madeli au (800) 819-6988 Ext.1 ou service@madeli.com


VISION/VISION SE - FREE STANDING CABINET Installation Guide

TYPICAL INSTALLATION

- 1) Level the linen cabinet at the same off-the-floor height as the matching vanity.
- 2) Secure the linen cabinet to wood backing and to wall.

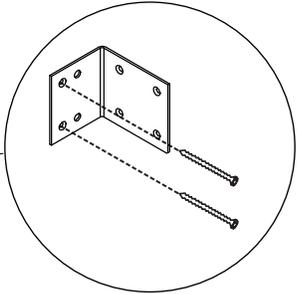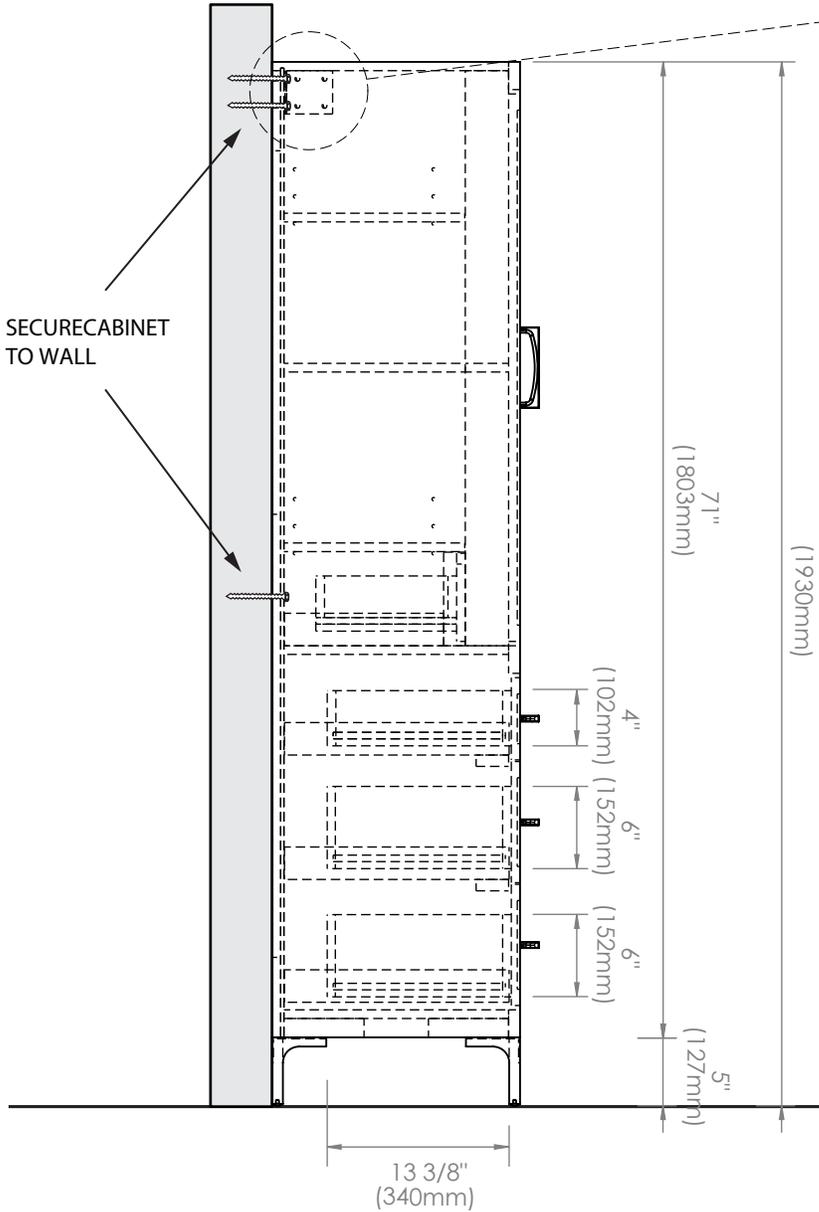

HANDLE INSTALLATION (FOR ALL MODELS)

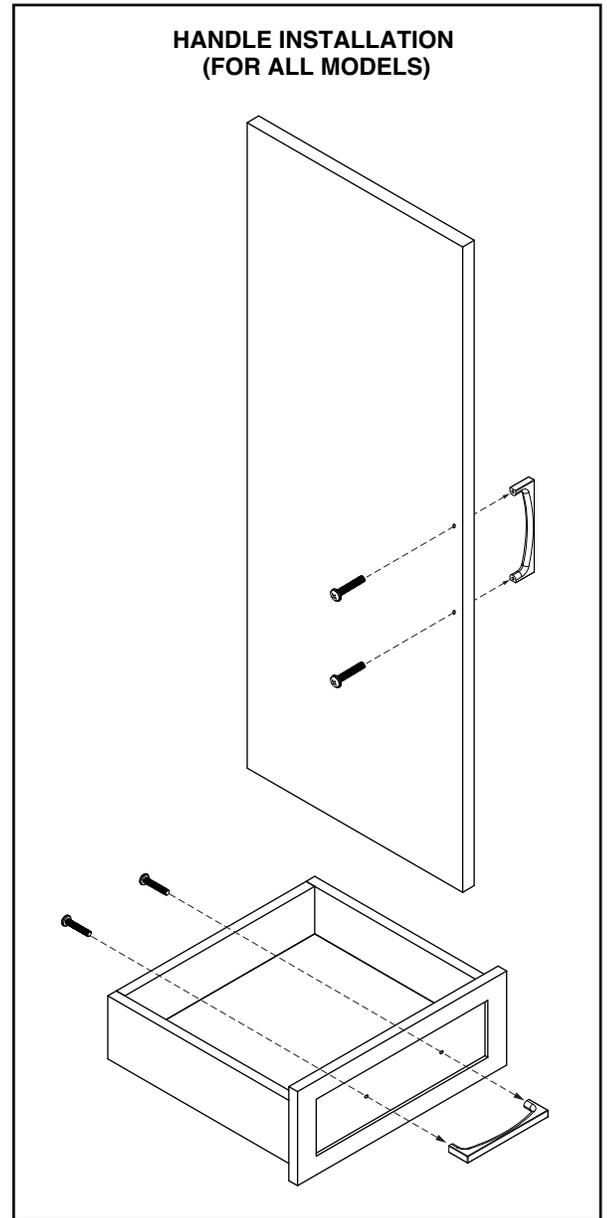

This free standing cabinet must be secured to wall with screws as shown.